Phizzle

Quick Start Guide Climet CI-x70

Welcome to Phizzle's Test Drive Program. You've received a box from our Sales team and are ready to begin using the Digital Air Series Platform with your Climet CI-x70. This Quick Start Guide will teach you how to onboard air particle counters to the platform — the first step to a fully digitized air particle counter workflow.

3. Click to Enable WiFi.



4. Enter the Main Menu again and click the Security icon, shaped like a key.



4. Scan for available WiFi networks. Select Local Wi-Fi Network. Click the "+" Icon in the lower right.



Admin-level user with both Telnet and Web enabled. Make note of the password you set — this should be the same for all your air particle counters.

8. Add an



 Power on your Climet.

Log into the Climet and enter the Main Menu.



5. Add the SSID of your WiFi network. Apply your Security settings. Reboot the Climet.



9. Enter the Main Menu again and enter General Settings.



2. Swipe down from the Main Menu to enter the Settings page. Enter the Wifi Menu labeled RH in the upper left.



6. Check to see you have successfully connected — you should have a green Wifi signal in the upper left.



10. Make note of the WiFi IP. Each air particle counter will be different. In this example, it is "192.168.8.198".



To set up the gateway you will need the IP Address, the Username we created, and the password for this user.

In this example it would be.

1 Username "Administrator"

2 Password "SomePassword#1!"

3 IP Address "192.168.8.198"